
## Radon Vented Sump Lid



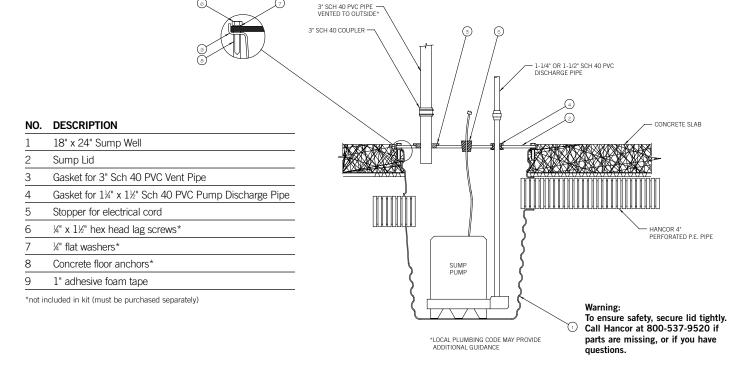

## Installation Instructions for the Radon Vented Sump Lid

- 1. Place lid on sump in desired position. Drill 4 holes suitable for the concrete floor anchors through slots around edge of lid. Remove lid and install floor anchors.
- 2. Install the rubber gasket for 3" Sch 40 vent pipe on the lid in the largest opening. Install gasket for either a  $1\frac{1}{4}$ " or  $1\frac{1}{2}$ " discharge pipe in the 3" opening. Feed electrical cord from pump through bottom of  $2\frac{1}{2}$ " opening.
- 3. Peel backing paper off of foam tape and press, sticky side down, around lid flange of sump.
- Place lid back on sump, sliding the discharge pipe through the discharge pipe gasket. Lubricating pipe or gasket with a standard soap-based pipe joint lubricant will aid in assembly.
- 5. Position lid on sump, checking alignment of slots and anchors. Place one washer on each of the four screws, insert into anchors, and tighten into floor.
- 6. Slip electrical cord from the pump through the slit in the stopper. Push stopper firmly into the hole on lid.
- Finish by installing a vent pipe through the large gasket in lid. Lubricating pipe or gasket will aid in assembly.



Buyer/user is responsible for serviceability of the product in any given application. Seller is not responsible for injury or damage resulting from improper installation, noncompliance with guidelines for installation of product, or use outside the guidelines set forth herein.

